



# Shin saver

## FITTING INSTRUCTIONS

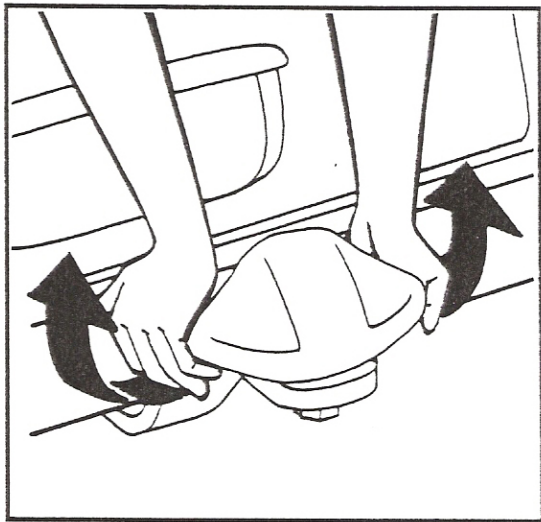

1. Clean towball and grease well to enable smooth fitting and removal of 'Shinsaver'.
2. Align 'Shinsaver' with straight edge facing the vehicle and place onto towball, push down at the centre until 'Shinsaver' slots onto the towbar gooseneck.
3. To remove 'Shinsaver', use hands on both sides and lift off vertically.

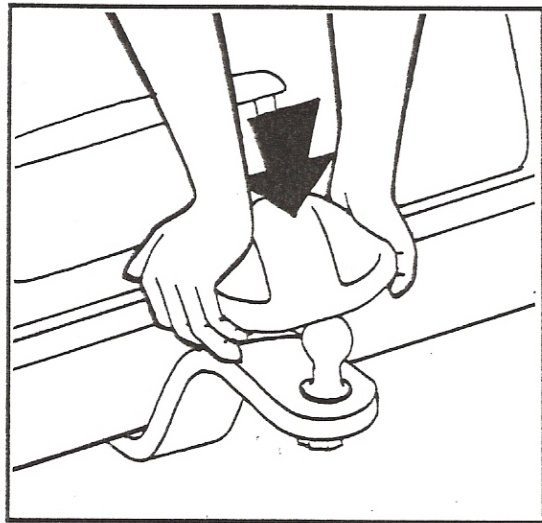

9 318668 600106